


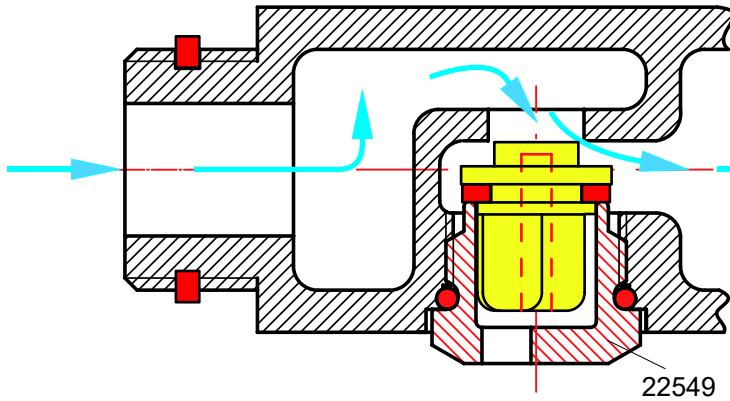


Wenn Druck an der Anschlußseite ansteht, wird der Belüftungskegel mit der Dichtung nach unten gedrückt und somit die Entlüftung geschlossen.

If pressure is applied at the connection side, then the aerator cone is pressed on the seat and thus the Vent is closed.

Anschlußseite
connection side

Wasserentnahme
water intake

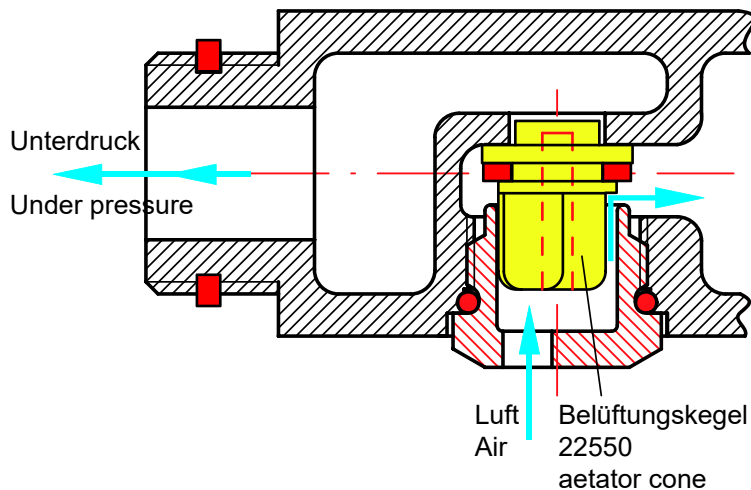

Tritt an der Anschlußseite Unterdruck auf, wird der Belüftungskegel angehoben, somit Luft zugeführt und damit die Rücksaugung zwischen Anschluß und Wasserentnahme unterbrochen. Schmutzwasserkann somit nicht in die Trinkwasserleitung gelangen.

Occurs at the connection side under pressure, If the ventilation cone is lifted, the Thus air is fed into the Suction between connection and Water is interrupted. Therefore, waste water cannot be Water supply.



Fehlerbehebung:

Wasseraustritt - Belüftungskegel 22549
Ausbauen - Säubern und **Spülen**!
Schmutz oder Spinnen über den Winter!

Troubleshooting:

Water Outlet-Ventilation cone 22549
Remove-Clean and **rinse**!
Dirt or spiders over the winter!